

apuro

Bistro Contact Grill

Instruction manual



Model

CD474-A/DM902-A/DM903-A/GH576-A/GH577-A/GH578-A

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT immerse the appliance in water.
- DO NOT allow oil or fat to come into contact with the plastic components. Clean immediately if contact occurs.
- DO NOT store products on top of the appliance.
- Always use the black handle to lift the plates.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- DO NOT carry when hot.
- Some surfaces become hot during operation - take care when using the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Always switch off and disconnect the power supply to the unit before cleaning.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a Apuro agent or a recommended qualified technician in order to avoid a hazard.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Product Description

- **CD474-A** - Single grill with ribbed plates
- **DM902-A** - Large single grill with ribbed plates
- **DM903-A** - Double grill with ribbed plates
- **GH576-A** - Single grill with flat plates
- **GH577-A** - Large single grill with flat plates
- **GH578-A** - Double grill with flat plates

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Pack Contents

The following is included:

- Apuro Contact Grill
- Allen Key
- Scraper
- Instruction Manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

Installation

Remove your Apuro Bistro Contact Grill from its packaging and be certain that all protective plastics and residues are thoroughly cleaned from its surface.

Locate on a firm level surface.

Apuro recommend that you allow at least a 100mm ventilated gap around the perimeter of the unit.

Ensure that the stainless steel waste tray is correctly positioned .

Connect to the electricity supply using the plug, the grill is now ready to turn on and operate.

Operation

Seasoning the Cooking Surfaces

The cooking plate surfaces need to be 'seasoned' before using for the first time.

1. Ensure the cooking surfaces are clean.
2. Brush the surfaces with cooking oil.
3. Set the thermostat(s) to 110°C and turn the appliance On. The power indicator light turns on.
4. Once the appliance reaches temperature the power indicator light turns off.
5. Turn the appliance Off and allow the to cool before wiping away any excess oil.
6. The appliance is now ready to use.

Cooking


1. Close the plates.

 **Note: It may be necessary to slightly grease the plates with cooking oil before cooking depending on the foodstuff.**

2. Set the thermostat(s) to the desired temperature (60°C-300°C) and turn the appliance On. The power indicator light(s) turn on.

 **Note: 200°C to 220°C is suitable for general cooking.**

3. The power indicator light(s) turn Off when the appliance has reached the set temperature.
4. Lift the top plate and place the foodstuff on the bottom plate.
5. Lower the top plate.

 **Note: All Apuro Contact Grills feature counter-balanced top plates that allow for even cooking.**

Adjusting Top Plate Tension

Use the Allen key supplied to adjust the tension of the top plate.

Turn clockwise to tighten, anti-clockwise to loosen.

 **Note: It is possible to tighten the plate so that it sits in the open position (if required).**

Apuro recommend the appliance is disconnected from the power supply and allowed to cool before any adjustments are made.

Cleaning, Care & Maintenance

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this follow the cleaning steps below:

- Always turn Off the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning but for best results clean the plates when they are still slightly warm.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Take care when using scrapers to remove cooking residues as they can damage the cooking surface.
- Dry thoroughly after cleaning.
- A Apuro dealer or qualified technician should carry out repairs if required.

Scraping

After each use, scrape the appliance with a scraper/grill stone/copper brush or flexible spatula to remove excess fat and food. A waste tray is provided for the scrapings if necessary.

If there is an accumulation of burned fat or food, the cooking surface should be thoroughly scoured and re-seasoned. .


 **NOTE: IT IS VITAL THAT THE COOKING SURFACE IS RE-SEASONED AFTER SCOURING.**

 **WARNING: DO NOT USE STEEL WOOL AS IT MAY LEAVE SHARDS THAT COULD CONTAMINATE FOOD.**

Waste Tray

These appliances feature a waste tray to collect any liquid or fats that run off during cooking.

At least once a day, remove and empty the waste tray before washing with warm soapy water. Do not allow the tray to overflow or excess grease will run out of the overflow hole at the front of the tray.

 **WARNING: DO NOT remove the tray during or immediately after use as the contents will be hot.**

Troubleshooting

If your Apuro appliance develops a fault, please check the following table before making a call to the Helpline.

Fault	Probable Cause	Action
The unit is not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call Apuro agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call Apuro agent or qualified technician
Appliance does not reach set temperature	Faulty thermostat	Call Apuro agent or qualified technician
	Faulty element	Call Apuro agent or qualified technician
Appliance heats up but indicator light does not come on	Bulb has expired	Call Apuro agent or qualified technician
Power indicator light comes on but appliance does not heat up	Faulty element	Call Apuro agent or qualified technician
	Faulty thermostat	Call Apuro agent or qualified technician
	Thermostat set incorrectly	Check thermostat
Appliance slow to heat up	Cooking surface not clean	Clean cooking surface
	Faulty element	Call Apuro agent or qualified technician

Technical Specifications

Model	Voltage	Power	Current	Plate Type		Dimensions h x w x d (mm)	Weight (kg)
				Top	Bottom		
CD474 -A	230V 50Hz	1500W	6.5A	Rib	Rib	210 x 290 x 320	14.5
DM902 -A		2900W	12.6A	Rib	Rib	210 x 540 x 320	27
DM903 -A		2200W	9.5A	Rib	Rib	210 x 380 x 320	19
GH576 -A		1500W	6.5A	Flat	Flat	210 x 290 x 320	14.5
GH578 -A		2900W	12.6A	Flat	Flat	210 x 540 x 320	27
GH577 -A		2200W	9.5A	Flat	Flat	210 x 380 x 320	19

Electrical Wiring

This appliance is supplied with a 3 pin, moulded, BS1363 plug and lead, with a 13 amp fuse as standard. The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



Apuro products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.

Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

Equipment Type	Bistro Grill
Model	CD474-A DM902-A DM903-A GH576-A GH577-A GH578-A
Legislation	C-Tick AS/NZ 3820 Essential Safety Requirements for Low Voltage Electrical Equipment
Standards	EN 55014-1:2006 EN 55014-2:1997+A1 EN 61000-3-2:2006 EN 61000-3-3:1995+A1+A2 EN 60335-1:2002+A11+A1+A12+A2+A13+A14 EN 60335-2-38:2002+A1ÂF2008 Annex ZZ of AS/NZS60335.1:2002++A1+A2+A3 EN 62233:2008
Producer Name	Apuro
Producer	15 Badgally Road,
Address	Campbelltown, NSW 2560

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

Date	23/03/11
Signature	
Full Name	Richard Cromwell
Position	Marketing Director

apuro