

**apuro**

# Fryer

Instruction manual



**Model**

**DL891-A / DL892-A / L370-A / P107-A**

# Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - BS EN Codes of Practice
  - Fire Precautions
  - IEE Wiring Regulations
  - Building Regulations
- ALWAYS ensure oil levels are within the 'MIN' and 'MAX' levels. Failure to do so could result in fire.
- ALWAYS use a suitable cooking oil.
- ALWAYS remove excess moisture/water from food before frying to avoid excess foaming and spitting of the oil.
- Change oil regularly. The flashpoint of oil (the point at which it ignites) gradually reduces the more it is used.
- DO NOT cover the oil pan when frying.
- DO NOT immerse the appliance in water.
- Some surfaces become hot during operation - take care when using the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a Apuro agent or a recommended qualified technician in order to avoid a hazard.

# Product Description

- **DL892-A** - Single 5 litre fryer
- **DL891-A** - Double 5 litre fryer
- **L370-A** - Single 3 litre fryer
- **P107-A** - Double 3 litre fryer

# Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

 
# Pack Contents

The following is included:

- Apuro Fryer
- Basket(s)
- Element guard(s) (DL892-A / DL891-A Only)
- Lid(s)
- Instruction manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage. Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

## Operation

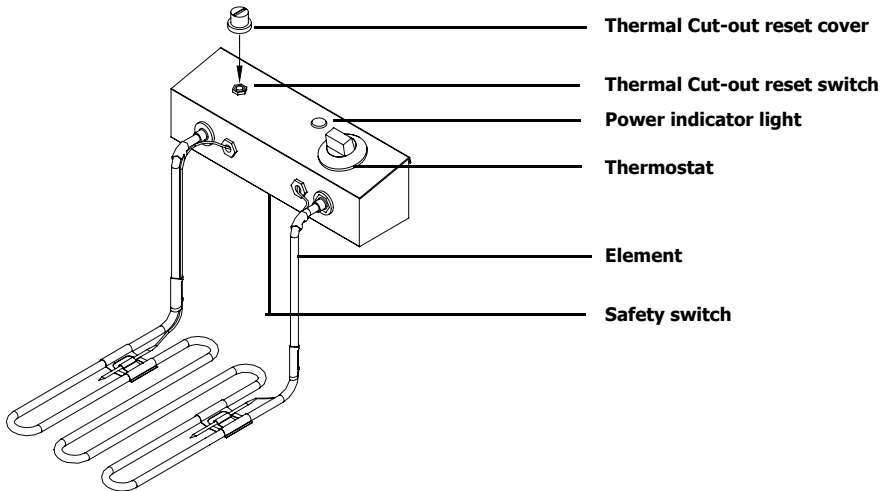


## Connecting the Element/Control Panel

The Element and Control Panel are supplied as a single detachable part to aid in cleaning the appliance.

To connect to the body of the appliance:

 1. Locate the lugs on the rear of the appliance with the tabs on the rear of the element/panel unit.
2. Ensure the safety switch is aligned with the slots on the appliance **[A]**.
3. Lower the unit onto the appliance, ensuring the tabs are located inside the lugs on the rear of the appliance **[B]**.

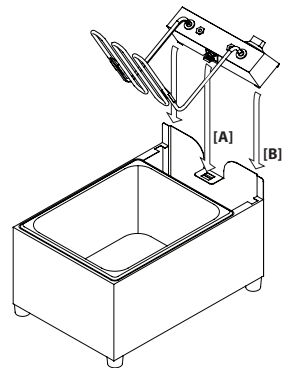

## Cooking

1. Connect the appliance to the mains power supply.
2. Set the thermostat to the desired temperature. The amber power indicator light turns On.



**Note: 170°C to 180°C is suitable for general cooking.**

3. The appliance begins to heat the oil.



**Note: The red Heat indicator light turns On during heat-up. When the oil is at the set temperatures the light turns Off.**

- Once the oil is at the set temperature lower the food into the oil using the basket supplied.

**WARNING: Ensure the basket is securely located on the basket mounts. These are located towards the front of the oil pan**

- Remove the basket from the oil once the food is cooked. Shake gently above the oil pan to remove any excess oil.

 
**WARNING: The food and oil are very hot! Take care when removing the basket as oil may drip.**

## Thermal Cut-Out Reset

Apuro Fryers are fitted with a Thermal Cut-Out safety feature. Should the temperature exceed safe levels the appliance will automatically cut power.

To reset the appliance after a sufficient cool-down period:

- Unscrew the cover of the Safety Cut-Out reset switch.
- Press the small reset switch down until it clicks, using a blunt pointed instrument.
- The appliance is now reset and can be used as normal.

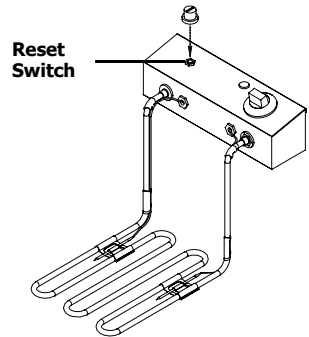

## Cleaning, Care & Maintenance

- Always turn Off the appliance and disconnect from the power supply before cleaning.
- Always allow the oil to cool before cleaning, ideally for at least 6 hours.
- Check the temperature with a suitable probe thermometer; 40°C is the MAXIMUM temperature at which oil should be removed.
- For best performance, Apuro recommend that the appliance is cleaned after each day of operation.

**Note: Failure to clean the appliance regularly may result in premature activation of the thermal cut-out switch.**

- Remove the Element/Control Panel for ease of cleaning.
- Empty the oil to clean the appliance thoroughly.

**WARNING: DO NOT remove the oil pan until AFTER it has been emptied.**

- If the oil is to be reused then filtering it before refilling the pan will extend the oils cooking life.
- Use a suitable detergent to clean the interior of the appliance.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Dry thoroughly after cleaning, ensure there is no water left in the fryer.
- A Apuro dealer or qualified technician should carry out repairs if required.

## Troubleshooting

If your Apuro appliance develops a fault, please check the following table before making a call to the Helpline.

Fault	Probable Cause	Action
The appliance is not working	The appliance is not switched on	Check the appliance is plugged in correctly and switched on
	Plug and lead are damaged	Call Apuro agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call Apuro agent or qualified technician
	Thermal cut-out activated	Reset thermal cut-out
	Safety switch not located properly	Refit control/element unit
Appliance does not reach set temperature	Faulty thermostat	Call Apuro agent or qualified technician
	Faulty element	Call Apuro agent or qualified technician
	Build-up of fat on the element	Clean the appliance
Appliance heats up but indicator light does not come on	Indicator light has expired	Call Apuro agent or qualified technician
Power indicator light comes on but appliance does not heat up	Faulty element	Call Apuro agent or qualified technician
	Faulty thermostat	Call Apuro agent or qualified technician
	Thermostat set incorrectly	Check thermostat
Appliance slow to heat up	Faulty element	Call Apuro agent or qualified technician
	Build-up of fat on the element	Clean the appliance

## Technical Specifications

Model	Voltage	Power	Current	Capacity (litres)	Maximum single load (kg)	Dimensions h x w x d (mm)	Weight (kg)
<b>DL892-A</b>	230V 50Hz	2200W	9.6A	5	2	300 x 270 x 400	5.8
<b>DL891-A</b>	230V 50Hz	2 x 2200W	2 x 9.6A	2 x 5	2 x 2	300 x 540 x 400	10.8
<b>L370-A</b>	230V 50Hz	2000W	8.7A	3	1.2	300 x 180 x 400	4.2
<b>DL891-A</b>	230V 50Hz	2 x 2000W	2 x 8.7A	2 x 3	2 x 1.2	300 x 269 x 400	8.0

## Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

## Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.



Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Apuro products have been approved to carry the following symbol:



**All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.**

**Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.**

# DECLARATION OF CONFORMITY

**Equipment Type** Fryer

**Model** DL891-A DL892-A L370-A P107-A

**Legislation** C-Tick  
AS/NZ 3820 Essential Safety Requirements for Low Voltage  
Electrical Equipment


**Standards** EN 55014-1:2006, EN 55014-2:1997+A1  
EN 61000-3-2:2006, EN 61000-3-3:1995+A1+A2  
EN 60335-2-37:2002+A1  
EN 60335-1:2002+A11+A1+A12+A2+A13 with AS/NZS 60335-  
1:2002+ A1+A2+A3, EN 62233:2008

**Producer Name** Apuro

**Producer Address** 15 Badgally Road,  
Campbelltown,  
NSW 2560

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

**Date** 22/03/11

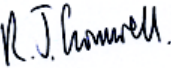**Signature** 

**Full Name** Richard Cromwell

**Position** Marketing Director

