

apuro[®]

Griddle

Instruction manual



Model
GC862-A / G791-A

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT immerse the appliance in water.
- Some surfaces become hot during operation - take care when using the appliance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance is not suitable for use by children.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a Apuro agent or a recommended qualified technician in order to avoid a hazard.

Product Description

- **GC862-A** - Counter Top Electric Griddle (Stainless Steel plate. Cooking Area: 520mm x 330mm)
- **G791-A** - Counter Top Electric Griddle (Stainless Steel plate. Cooking Area: 738mm x 330mm)

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your Apuro product.

Pack Contents

The following is included:

- Apuro Griddle
- Waste Tray
- Instruction Manual

Apuro prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your Apuro dealer immediately.

Operation



Seasoning the Griddle Plate

Before using for the first time the cooking surface needs to be seasoned.

1. Ensure the cooking surface is clean.
2. Brush the surface with cooking oil.
3. Set the thermostat to 110°C and turn the appliance On. The power indicator light turns on.
4. Once the appliance reaches temperature the power indicator light turns off.
5. Turn the appliance Off and allow to cool before wiping away any excess oil.
6. The appliance is now ready to use.

Cooking

1. Connect the appliance to the mains power supply.
2. Set the thermostat to the desired temperature (60°C-300°C). The power indicator light comes on and the appliance begins to heat up.



Note: 200°C to 220°C is suitable for general cooking.

3. The power indicator light turns off when the appliance has reached the set temperature.



Note: Apuro recommend the cooking surface is lightly oiled before cooking.

4. Place the foodstuffs on the griddle plate and cook as required.

Cleaning, Care & Maintenance

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this follow the cleaning steps below:


- Always turn Off the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Take care when using scrapers to remove cooking residues as they can damage the cooking surface.
- Dry thoroughly after cleaning.
- A Apuro dealer or qualified technician should carry out repairs if required.

Scraping

After each use, scrape the appliance with a scraper/grill stone/copper brush or flexible spatula to remove excess fat and food. A waste tray is provided for the scrapings if necessary.

If there is an accumulation of burned fat or food, the cooking surface should be thoroughly scoured and re-seasoned. .


 **NOTE: IT IS VITAL THAT THE COOKING SURFACE IS RE-SEASONED AFTER SCOURING.**

 **WARNING: DO NOT USE STEEL WOOL AS IT MAY LEAVE SHARDS THAT COULD CONTAMINATE FOOD.**

Waste Tray

These appliances feature a waste tray to collect any liquid or fats that run off during cooking.

At least once a day, remove and empty the waste tray before washing with warm soapy water. Do not allow the tray to overfill or excess grease will run out of the overflow hole at the front of the tray.

 **WARNING: DO NOT remove the tray during or immediately after use as the contents will be hot.**

Troubleshooting

If your Apuro appliance develops a fault, please check the following table before making a call to the Helpline.

| Fault | Probable Cause | Action |
|---|----------------------------------|---|
| The appliance is not working | The appliance is not switched on | Check the appliance is plugged in correctly and switched on |
| | Plug and lead are damaged | Call Apuro agent or qualified technician |
| | Fuse in the plug has blown | Replace the plug fuse |
| | Power supply | Check power supply |
| | Internal wiring fault | Call Apuro agent or qualified technician |
| Appliance does not reach set temperature | Faulty thermostat | Call Apuro agent or qualified technician |
| | Faulty element | Call Apuro agent or qualified technician |
| Appliance heats up but indicator light does not come on | Bulb has expired | Call Apuro agent or qualified technician |
| Power indicator light comes on but appliance does not heat up | Faulty element | Call Apuro agent or qualified technician |
| | Faulty thermostat | Call Apuro agent or qualified technician |
| | Thermostat set incorrectly | Check thermostat |
| Appliance slow to heat up | Cooking surface not clean | Clean cooking surface |
| | Faulty element | Call Apuro agent or qualified technician |

Technical Specifications

| Model | Voltage | Power | Current | Cooking Surface Dimensions w x d (mm) | Dimensions h x w x d (mm) | Weight (kg) |
|----------------|-----------|-------|---------|---------------------------------------|---------------------------|-------------|
| GC862-A | 230V 50Hz | 2200W | 9.6A | 520 x 330 | 185 x 523 x 439 | 21.5 |
| G791-A | 230V 50Hz | 2900W | 12.6A | 738 x 330 | 200 x 750 x 450 | 32.5 |

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

Apuro products have been approved to carry the following symbol:



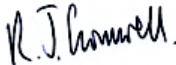
All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro.

Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

| | |
|-------------------------|--|
| Equipment Type | Griddle |
| Model | GC862-A, G791-A |
| Legislation | C-Tick |
| | AS/NZ 3820 Essential Safety Requirements for Low Voltage Electrical Equipment |
| Standards | EN 55014-1:2006 + A1 |
| | EN 55014-2:1997+A1+A2 |
| | EN 61000-3-2:2006+ A1 +A2 |
| | EN 61000-3-3:1995+A1+A2 |
| | IEC 60335-2-38+A1+ Annex ZZ of AS/ |
| | NZS60335.1:2002+A3 |
| | EN 62233:2008 |
| Producer Name | Apuro |
| Producer Address | 15 Badgally Road, |
| | Campbelltown |
| | NSW 2560 |

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

| | |
|------------------|---|
| Date | 26/09/11 |
| Signature |  |
| Full Name | Richard Cromwell |
| Position | Marketing Director |

apuro[®]